



PRESSURE & VACUUM RELIEF VALVE

MODEL

Atmospheric Pressure or Vacuum Relief Valve

PRINCIPLE

Relieves excessive pressure or a vacuum in the tank during emptying and filling.

APPLICATION

When excess pressure occurs in the tank, the seat is pushed opened externally in relief.

When a vacuum is present in the tank, the seat is forced to open internally in relief.

NOTE

This valve is not to be used to vent a tank in the CIP (cleaning in place) process. The valve is not to be used on tanks with a volume larger than 10000LT.

OPTIONS

Available in grade 304L stainless steel.


Two variations available:

1. A machined lip acts as a liner so the valve can be fitted into a 2" Danish Round type dairy union. The valve is placed on the male / gasket and the nut is placed over the valve and tightened into place.
2. A 2" male thread is machined on the external body so the valve can be screwed in to a 2" BSP socket.





PRESSURE & VACUUM RELIEF VALVE

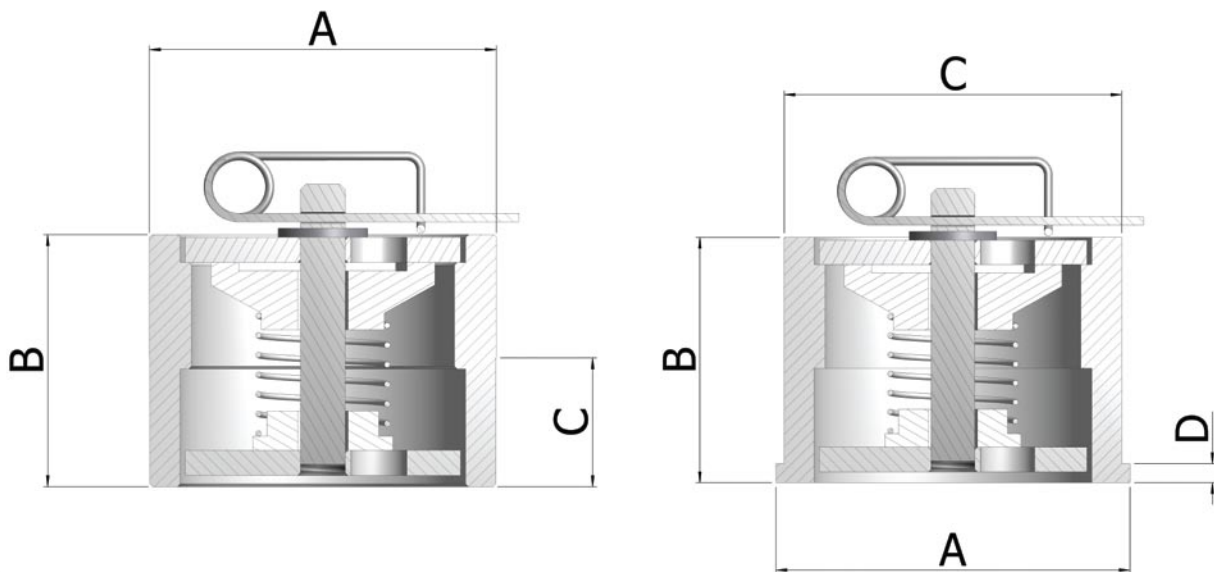

DIMENSIONS

MODEL	A	B	C	D	MWP	MWV
516-5	65	45	62	3	1.5kPa	1.5kPa
516-6	59.5	45	59.5	NA	1.5kPa	1.5kPa

MWP = Maximum Working Pressure
 MWV = Maximum Working Vacuum
 All measurements in millimeters (mm)

Contact us on +27 11 674 1300/3 for more information.

The information contained in this brochure is for guidance only. BMC Engineering reserves the right to modify any material or feature without advance notice. For further information please consult our web site.

www.bmceng.co.za

 **BMC Engineering**